



DAE SUNG E.N.G


Digital Control Panel Meter
www.foxeng.co.kr




DAE SUNG E.N.G

FOX-2002


■ Connection

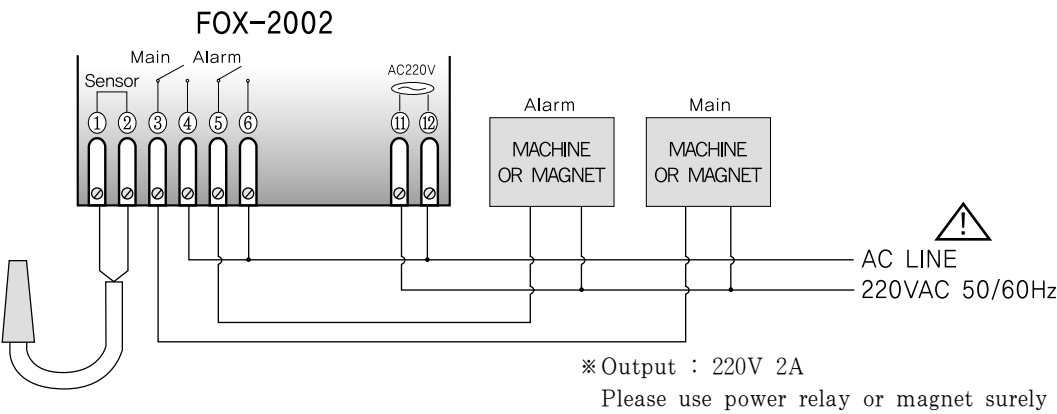

Setting temperature

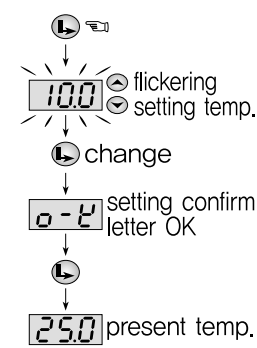

Setting for program

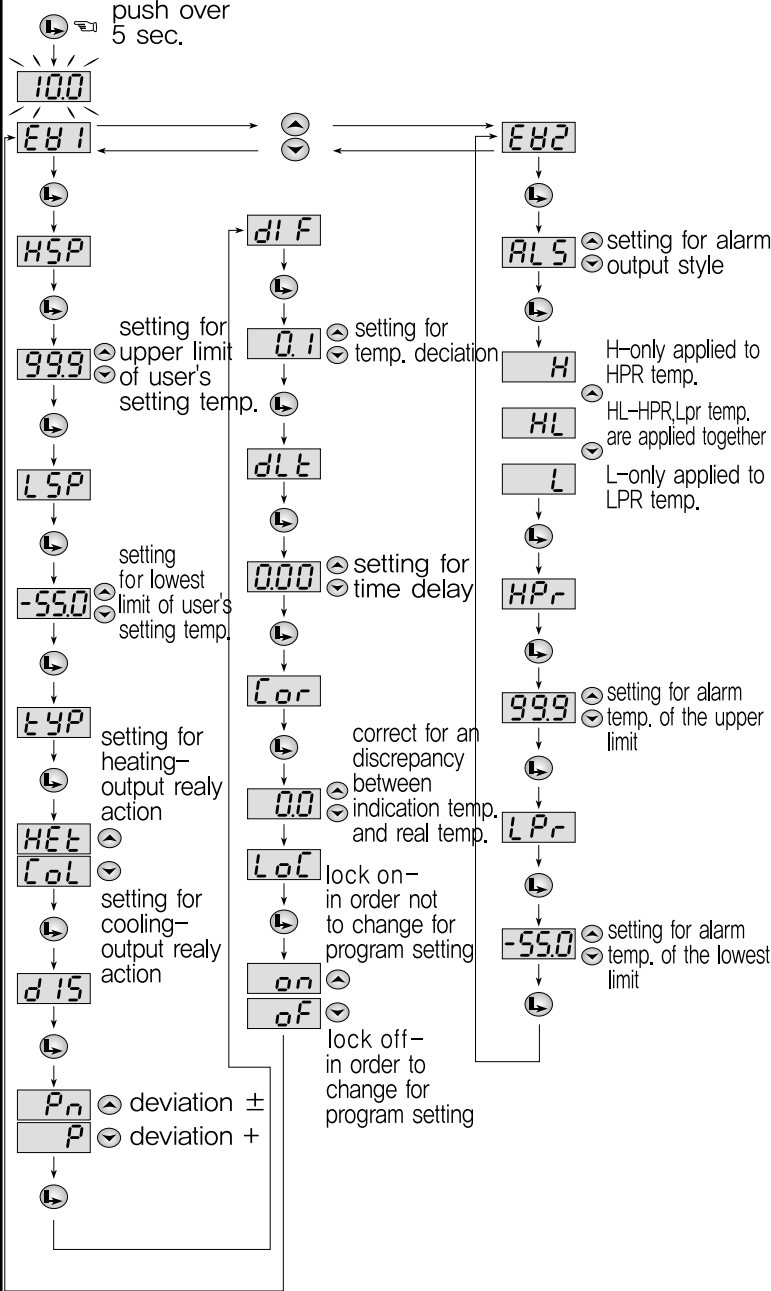


※ After a close of all programs, if key is pushed for 2sec., be closed after confirmation of OK letter or return at present temp. automatically after 10 sec.

Explanatory for auto. Temp. controller

Model	sensor	Temp. Range	Function
FOX-2002	NTC	-55.0°C ~ +99.9°C	temp./alarm

1. Part name

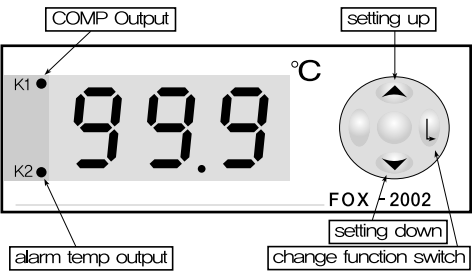


2. Change of User Mode & Setting for Installer Mode Function

- Change of User Mode
When key is pushed, setting temperature is flicked.
Push key to change the setting value.
If key is pushed again, letter is indicated and setting temperature is remembered.
- Setting for Installer Mode Function
If key is pushed over 5second, letter or letter is indicated and push key to change the letter.
As letter is indicated, set in the following order: HSP(setting for the upper limit of user's setting temp.), LSP(setting for the lowest limit of user's setting temp.), TYP(function, HET-heating, COL-cooling), DIS(select for deviation style), DIF(setting for temp. deviation), DLF(setting for time delay), COR(correct for an discrepancy between indication temp. and real temp.), LOC(lock function, ON-setting for lock function, OF-removal for lock function)
As letter is indicated, set in the following order: ALS(setting for alarm output style, H-only applied to HPR temp., HL-HPR, LPR temp. are applied together, L-only applied to LPR temp.), HPR(Hi-alarm temp. setting), LPR(Low-alarm temp. setting) and setting value each mode should changed by pressing key and then press key to move to next mode.

● Explanatory

	Function	Indication	Range	Setting value when deliver	Remarks
Setting temp.	Temp. setting		-55.0 ~ 99.9	10.0	
Setting Program	Setting for the upper limit of user's setting temp.	HSP	LSP ~ 99.9	99.9	
		LSP	-55.0 ~ HSP	-55.0	
	Select function	TYP	COL/HET	COL	HET - heating COL - cooling
	Select for deviation style	DIS	P/PN	P	PN - deviation ± P - deviation +
	Setting for temp. deviation	DIF	0.1 ~ 19.9	1.0	
	Setting for time delay	DLT	0.00 ~ 9.59	0.00	(min., sec.)
	Correct for an discrepancy between indication temp. and real temp.	COR	-15.0 ~ 15.0		
	Lock function	LOC	ON/OFF	OF	ON - setting for lock function OF - removal for lock function
	Setting for alarm output style	ALS	L HL H	HL	L - Low-alarm temp. LH - Low & Hi-alarm temp. H - Hi-alarm temp.
		HPR	-55.0 ~ 99.9	99.9	
		LPR	55.0 ~ 99.9	-55.5	

3. Dimension

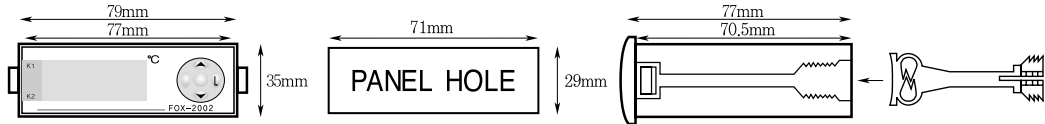

5. CAUTION

Warning

Pls use this item after set up safety device doubly in which is applied at dangerous equipment such as serious human injury or serious damages property & important machine because this item is not designed as safety device.

Caution

- Do not distributing wires or install the device for the occurrence of an induction load of motor solenoid.
- Please use shield wire when sensor lengthen, however do not make it too much longer.
- Please do not use the components which is occurring arks when on/off near it or same power.
- Power cable keeps away from high-voltage cable and do not install the device where water, on and dust.
- Do not install the device from direct rays of the sun & exposed a site due to rain.
- Do not install the device from strong magnet & noise vibration or shock.
- Please install the device from a great distance out of places occurring strong-alkali or strong-acidity.
- Do not sprinkle water for clean purpose when installing in the kitchen.
- Do not install the device from the places where Temp./Humi. exceed regular power.
- Please use the sensor wire without any cutting & flawing.
- Do not install the sensor wire nearby signal wire power or load and Please use self-pipe.
- Please understand you can't get any A/S service when you open or re-model it with free.
- is the safety letter like warning, caution.
- Please do not use the device close by which occurring strong high-frequency noise (high-frequency: welding, sewing machine, wireless transmitter, SCR controller for high capacity)
- Please use this item proper method without any damage or injury.

Danger

Caution, Danger of electric shock

- Electric shock - Do not touch AC board during on power because of electric shock.
- Please intercept input power surely when input power check.

The way of diagnosis for breakdown

Indicating ERROR on using items

- This ERROR is the damage of memory data for various of inner-Data due to be get noised strongly from outside while using this items. Please request us A/S by return. Although our controller is designed as the complementary measures regarding these noise from outside, it is not endurable against these noise with endlessly.
If noise (2kv) disordering become an inflow, the inner-part will be damaged.
- When shows these letter (open error) (short error) (error), error in sensor. Pls check sensor.

※ Above Products information can be changed to improve it's quality without any notification
When this products use, pls observe the information of caution & Warning due to give rise to disordering.

■ H. Office : B-112, Techno plaza 681-11
Junpo 1 dong, Busanjin-ku,
Busan, Korea
Factory : B-408, 409, 410, Techno plaza 681-11
Junpo 1 dong, Busanjin-ku,
Busan, Korea
A/S TEL : 82+51+819+0427 FAX : 82+51+819+4562
E-mail : foxeng@foxeng.co.kr
Homepage : http://www.foxeng.co.kr

※ This device works proper operation with;
Surrounding Temp. : 0°C ~ 55°C
Surrounding Humi. : below 80%RH
Regular power : 220VAC